



DVD Reset Procedures

Click on your model to see the reset procedure

**XVS200-XVS300-XVS302-XVS400-XVS402
XVS500-XVS502-XVS600-XVS602
XVS60-XVS62-XVS65
XVSA70-XVSA75
XVF80-XVF85
XVFA90-XVF92-XVFA95
HR-XVC1
MX-DVA5
TH-A5
MX-DVA9
TH-A9
TH-A10
XVLTR1-XVS30-XVS40-XVS42-XVS45-XVE100
XVM50
XV-501
XV-511
XV421 - XV521 - XV525- XV523
XV-M555
XVM565 - XVM567
XVD-701
XVD721 - XVD723
XV1000
XVD2000**

DVD reset procedure for HR-XVC1

This procedure also resets 4 digit password and all settings of the unit.

1. Turn the power on and make sure there is no disc in the unit.
2. Press and hold digit "7" on the remote control then press STOP button on the front panel.
3. Hold both buttons in, for at least 3 seconds.
4. "INITIALIZED" should be displayed on the front panel.
5. Reset is complete.

DVD reset procedure for MX-DVA5

1. Shut off the unit.
2. Press and hold the TAPE B button on the front panel and wait 5 seconds.
3. Front display will momentarily flash
4. Reset is finished.

DVD reset procedure for TH-A5

1. While unit is turned on and NO DISC shows on the front panel, press and hold STOP button for approx. 5 sec.
2. When INITIAL is displayed on the front panel reset is complete.

DVD reset procedure for MX-DVA9

1. Shut off the unit.
2. Press STOP and CANCEL/DEMO and wait 4 seconds.
3. Front display will show "TEST *****"
4. Press ENTER button on the remote.
5. After EEPROM shows up on the display panel turn unit off.
6. Reset is finished

DVD reset procedure for TH-A9

1. Turn the power on so the STOP button is exposed on the top of the unit.
2. Disconnect the power cord.
3. While Pressing "Stop" and "Open/Close" button reconnect the power cord.
4. "TEST" should be displayed on the front panel, then hit ENTER on the remote.
5. After "EEPROM " is shown on the front panel, turn power off.
6. Reset is complete.

DVD reset procedure for TH-A10

1. Make sure there is no Disc in the tray.
2. Disconnect the power cord.
3. While Pressing "Stop" and "Open/Close" buttons together reconnect the power cord
4. Front display will show "TEST0".
5. Then the display will change to : "TEST1 JC2".
6. Press "Enter" button on the remote, display will show "EEPROM"
7. Press "Power" to shut unit off.
8. Reset is finished

DVD reset procedure for XVLTR1-XVS30-XVS40-XVS42-XVS45-XVE100SL

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. While pressing both PLAY and OPEN/CLOSE buttons on the front panel reconnect the power cord
4. On the front panel "TEST *****" will be displayed
5. Press 3D PHONIC button on the remote control
6. After "DTS " is displayed on the front panel turn the unit off.
7. Unit is ready to use

DVD reset procedure for XVM50

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. While pressing both PLAY and DISC 1 OPEN/CLOSE buttons on the front panel reconnect the power cord
4. Front display will show "TEST"
5. Press "3D PHONIC" button on the remote.
6. After "V.REPLACE" shows up turn unit off, reset is finished

DVD reset procedure for XVS60-XVS62-XVS65

1. Make sure there is no disc in the tray, then shut off unit and disconnect the power cord.
2. While holding PLAY and STOP buttons reconnect the power cord
3. Word TEST should be displayed on the front panel
4. Press FORWARD SKIPP >>I button on the front panel , then press PAUSE
5. Wait until green indicator will light up (PROGRESSIVE light--after approx. 10 seconds)
6. Shut the power off, reset is finished

DVD Reset procedure XVSA70-XVSA75

1. Make sure there is no disc in the tray, then shut off unit and disconnect the power cord.
2. While holding PLAY and STOP buttons reconnect the power cord
3. Word TEST should be displayed on the front panel
4. Press FORWARD SKIPP >>I button on the front panel , then press PAUSE

5. Wait until blue indicator will light up (DVD AUDIO light--after approx. 10 seconds)
6. Shut the power off, reset is complete.

DVD Reset procedure XVF80-XVF85

1. Make sure there is no disc in the tray, then shut off unit and disconnect the power cord.
2. While holding PLAY and STOP buttons reconnect the power cord
3. Word TEST should be displayed on the front panel
4. Press FORWARD SKIPP >>I button on the front panel , then press PAUSE
5. Wait until green indicator will light up (PROGRESSIVE light--after approx. 10 seconds)
6. Shut the power off, reset is finished

DVD Reset procedure XVFA90-XVF92-XVFA95

1. Make sure there is no disc in the tray, then shut off unit and disconnect the power cord.
2. While holding PLAY and STOP buttons reconnect the power cord
3. Word TEST should be displayed on the front panel
4. Press FORWARD SKIPP >>I button on the front panel , then press PAUSE
5. Wait until blue indicator will light up (DVD AUDIO light--after approx. 10 seconds)
6. Shut the power off, reset is finished

DVD reset procedure for XVS200-XVS300-XVS302-XVS400-XVS402

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. While pressing both PLAY and OPEN/CLOSE buttons on the front panel reconnect the power cord
4. On the front panel "TEST *****" will be displayed
5. Press 3D PHONIC button on the remote control
6. After "DTS " is displayed on the front panel turn the unit off.
7. Unit is ready to use

DVD reset procedure for XVS500-XVS502-XVS600-XVS602

Make sure the reset procedure is performed in interlaced mode i.e. the PROGRESSIVE indicator must be turned off.

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. While pressing both PLAY and STOP buttons on the front panel reconnect the power cord
4. On the front panel "TEST *****" will be displayed
5. Press PAUSE button on the front panel.
6. Wait until green indicator will light up (PROGRESSIVE light--after approx. 10 seconds) on the front panel.
7. Turn the power off and unit is ready to use.

DVD Reset procedure XV-501

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. Press and hold the "On Screen" and "Title" Keys, simultaneously.
4. While holding these keys, plug the AC cord back into the outlet. (TEST JC3 or JC2 will appear on the display)
5. Release these keys and then press the "Enter" key.
6. The "Resume" light will illuminate. (initialization is complete)
7. Press the "Power button" to turn the unit off.
8. Press the "Power button" to turn the unit back on. (your player should be functioning properly now.)

If your DVD player continues to malfunction, we recommend that you have the unit examined by a JVC Factory or Authorized Service Facility. You may obtain the names and locations of the nearest JVC Factory or Authorized Service Center by calling 1-800-537-5722. Or by clicking here: <http://www.jvcservice.com/usa.htm>. Follow the same links as VCR repair.

DVD Reset procedure XV-511

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. Press and hold the "Play" and "Open/Close" Keys, simultaneously.
4. While holding these keys, plug the AC cord back into the outlet. (TEST and CPU ver# will appear on the display)
5. Release these keys and then press the "3D-Phonic" key.
6. When 96KHz appears on the display, initialization is complete.
7. Press the "Power button" to turn the unit off.
8. Press the "Power button" to turn the unit back on. (your player should be functioning properly now.)

DVD Reset procedure XV421 - XV521 - XV525- XV523

1. Remove Disc from the tray
2. Unplug the unit from AC source.
3. While Pressing both "PLAY" and "OPEN/CLOSE" keys together, plug the unit to the AC source. \
4. "TEST JC1" will be displayed on the fluorescent display.
5. Press "3D-PHONIC" Key.
6. When "V-REPLACE" is indicated on the FDP, initialization is complete
7. Press "POWER" key to exit test mode.

DVD Reset procedure XV-M555

1. Make sure there is no Disc in the trays.
2. Shut off the unit and unplug it from the AC outlet.
3. While simultaneously pressing "Play" and "Eject 1" front panel buttons, plug it back in again
4. The display will read "Test xxx (xxx can be any characters)"
5. Press the "3-D Phonic" key
6. The display will indicate "V.Replace"
7. Power the unit off (from the power switch) the reset should be complete.

DVD reset procedure for XVM565 - XVM567

1. Make sure there is no disk in the unit and turn it off.
2. Unplug the power cord.
3. While pressing down "OPEN/CLOSE" of disc 1 and "PLAY" buttons together reconnect the power cord to the wall outlet.
4. Press "3D PHONIC" button.
5. After front display window reads " V REPLACE" disconnect the power cord again.
6. Reconnect the power cord and press "POWER" button then press "DIMMER".
7. Unit should be functioning properly now.

DVD Reset procedure XVD-701

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. Press and hold the "On Screen" and "Title" Keys, simultaneously.
4. While holding these keys, plug the AC cord back into the outlet. (TEST JC3 or JC2 will appear on the display)
5. Release these keys and then press the "Enter" key.
6. The "Resume" light will illuminate. (initialization is complete)
7. Press the "Power button" to turn the unit off.
8. Press the "Power button" to turn the unit back on. (your player should be functioning properly now.)

If your DVD player continues to malfunction, we recommend that you have the unit examined by a JVC Factory or Authorized Service Facility. You may obtain the names and locations of the nearest JVC Factory or Authorized Service Center by calling 1-800-537-5722. Or by clicking here: <http://www.jvcservice.com/usa.htm>. Follow the same links as VCR repair.

DVD reset procedure for XVD 721 - XVD723

1. Unplug power cord from AC source.
2. While pressing the STOP and PLAY keys together, plug the AC cord back to the outlet.
3. Continue pressing the keys until the "TEST JC" appears on the fluorescent display.
4. Press F. SKIP key followed by PAUSE key.
5. Confirm that the DVD AUDIO blue indicator lights up after several seconds
6. Unit is ready to use.

DVD reset procedure for XVFA900-XVFA902

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. While pressing both PLAY and STOP buttons on the front panel reconnect the power cord
4. On the front panel "TEST *****" will be displayed
5. Press FORWARD SKIPP >>I button then PAUSE button on the front panel.
6. Wait until DVD AUDIO indicator will light up (after approx. 10 seconds) on the front panel.
7. Turn the power off and unit is ready to use.

DVD Reset procedure XV-1000

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. Press and hold the "On Screen" and "DVD Menu" Keys, simultaneously.
4. While holding these keys, plug the AC cord back into the outlet.
5. Release "On Screen" and "DVD Menu" then press the "Power key, "TEST" will appear on the Display.
6. Now press "Enter" to start the initialization (takes about 5 seconds)
7. Press "Power" to turn the unit back on and it should be functioning properly now

DVD Reset procedure XVD-2000

1. Make sure there is no Disc in the tray.
2. Shut off the unit and unplug it from the AC outlet.
3. Press and hold the "On Screen" and "DVD Menu" Keys, simultaneously.
4. While holding these keys, plug the AC cord back into the outlet.
5. Release "On Screen" and "DVD Menu" then press the "Power key, "TEST" will appear on the Display.

6. Now press "Enter" to start the initialization (takes about 3 seconds)
7. Press the "OPEN/CLOSE" key, and the tray will come out.
8. Press the "OPEN /CLOSE" key again and the tray will close.
9. Press the "Power" the unit will power off in about 5-7 seconds.
10. Press "Power" to turn the unit back on and it should be functioning properly now.